


Operating manual Digital Caliper with fractions Mechanic 150 PRO

MEASUREMENTS

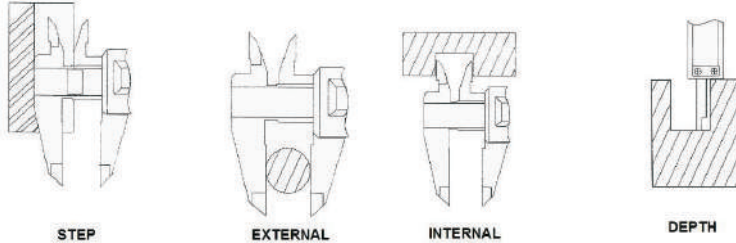

SPECIFICATIONS

Measuring length: 6" (150 mm)
 Resolution: Inch = 0.0005"
 Metric = 0.01mm
 Accuracy: Inch = ±0.0005"
 Metric = ±0.03 mm
 Battery: 6 months life; type SR44

BATTERY REPLACEMENT / TROUBLE SHOOTING

Problem	Possible cause	Solution
Flashing Digits	Low voltage	Replace Battery
No Display	Low voltage	Replace Battery
No Display	Bad contact	Clean Battery
Erratic or Frozen Display	Internal Error	Remove battery, wait 1 minute and replace

FUNCTIONS

ON/OFF - turns the power completely on or off. When turned ON, the calipers set to 0.00.
IN/MM - toggles from decimal inches to millimeter.
ZERO - sets display to 0.00 at any position
Auto shut off - turns power off automatically after 5 minutes

WARRANTY DOESN'T EXTEND TO FOLLOWING CASES:

1. If the standard or serial product number will be changed, erased, removed or will be unreadable.
2. Periodic maintenance, repair or changing parts as a result of their normal runout.
3. All adaptations and modifications with the purpose of improvement and expansion of normal sphere of product application, mentioned in the service instruction, without tentative written agreement of the expert provider.
4. Service by anyone other than an authorized service center.
5. Damage to products or parts caused by misuse, including, without limitation, misapplication or negligence of the terms of service instruction.
6. Power supply units, chargers, accessories, wearing parts.
7. Products, damaged from mishandling, faulty adjustment, maintenance with low-quality and non-standard materials, presence of any liquids and foreign objects inside the product.
8. Acts of God and/or actions of third persons.
9. In case of unwarranted repair till the end of warranty period because of damages during the operation of the product, its transportation and storing, warranty doesn't resume.

For more information you can visit our website WWW.ADAINSTRUMENTS.COM or write the letter with your questions on info@adainstruments.com

WARRANTY CARD

Name and model of the product _____

Serial number _____ date of sale _____

Name of commercial organization _____ stamp of commercial organization _____

Warranty period for the instrument exploitation is 24 months after the date of original retail purchase.

During this warranty period the owner of the product has the right for free repair of his instrument in case of manufacturing defects.

Warranty is valid only with original warranty card, fully and clear filled (stamp or mark of the seller is obligatory).

Technical examination of instruments for fault identification which is under the warranty, is made only in the authorized service center.

In no event shall manufacturer be liable before the client for direct or consequential damages, loss of profit or any other damage which occur in the result of the instrument outage.

The product is received in the state of operability, without any visible damages, in full completeness. It is tested in my presence. I have no complaints to the product quality. I am familiar with the conditions of warranty service and I agree.

purchaser signature _____

Before operating you should read service instruction!

If you have any questions about the warranty service and technical support contact seller of this product

Certificate of acceptance and sale

_____ **No** _____
 name and model of the instrument

Corresponds to _____
 designation of standard and technical requirements

Data of issue _____

Stamp of quality control department

Price

Sold _____
 name of commercial establishment

Date of sale _____