Instruction Manual

BL 931700-0 BL 931700-1

Panel-Mounted pH Indicators & **Controllers**



WARRANTY

These instruments are quaranteed for two years against defects in workmanship and materials when used for their intended purpose and maintained according to instructions. Electrodes and probes are augranteed for six months. This warranty is limited to repair or replacement free of

Damages due to accidents, misuse, tampering or lack of prescribed maintenance are not covered.

If service is required, contact the dealer from whom you purchased the instrument. If under warranty, report the model number, date of purchase, serial number and the nature of the problem. If the repair is not covered by the warranty, you will be notified of the charges incurred. If the instrument is to be returned to Hanna Instruments, first obtain a Returned Goods Authorization number from the Technical Service department and then send it with shipping costs prepaid. When shipping any instrument, make sure it is properly packaged for complete protection.

Recommendations for Users

Before using these products, make sure that they are entirely suitable for the environment in which they are used. Operation of these instruments in residential areas could cause unacceptable interferences to radio and TV equipment. The glass bulb at the end of the electrode is sensitive to electrostatic discharges. Avoid touching this glass bulb at all times. During operation, ESD wrist straps should be worn to avoid possible damage to the electrode by electrostatic discharges. Any variation introduced by the user to the supplied equipment may degrade the instrument's EMC performance. To avoid electrical shock, do not use these instruments when voltages at the measurement surface exceed 24 Vac or 60 Vdc. To avoid damages or burns, do not perform any measurement in microwave ovens.

Dear Customer

Thank you for choosing a Hanna Instruments product. Please read this instruction manual carefully before using these instruments. This manual will provide you with the necessary information for correct use of these instruments. If you need additional technical information, do not hesitate to e-mail us at tech@hannainst.com or view our worldwide contact list at www.hannainst.com.

PRELIMINARY EXAMINATION

Remove the instrument from the packing material and examine it carefully to make sure that no damage has occurred during shipping. If there is any damage, notify vour Dealer or the nearest Hanna Customer Service Center. Each meter is supplied with:

- Mounting brackets
- Instruction manual

Note: Save all packing material until you are sure that the instrument functions correctly. All defective items must be returned in the original packing with the supplied accessories.

GENERAL DESCRIPTION

BL931700-0 and BL931700-1 are panel-mounted pH indicators and controllers designed for simplicity of use in a wide range of industrial applications.

Connections and wiring to electrode, power supply, contacts and external recorders are made via the terminal blocks on the rear panel. The meters are equipped with a BNC socket and accept input from conventional pH electrodes.

Other features include: 4-20 mA output, overtime control system, selection of dosing direction (Acid/Alk), contact for external control and disabling of dosing action, multi-colour LED for indicating if the meter is in measurement/dosing/ alarm condition, possibility to set (Off-Auto-On switch) dosing action mode

Two models are available:


- BL 931700-0 powered at 12 Vdc
- BL 931700-1 powered at 115 or 230 Vac

All rights are reserved. Reproduction in whole or in part is prohibited without the written consent of the copyright owner, Hanna Instruments Inc., Woonsocket, Rhode Island, 02895, USA.

SPECIFICATIONS

Range	0.00 to 14.00 pH
Resolution	0.01 pH
Accuracy (@ 25 °C	1./77 °F) ± 0.02 pH
Calibration	Manual, through OFFSET & SLOPE trimmers
Dosing Contact	Maximum 2A (fuse protected),
	250 Vac, 30 Vdc
Dosing Selection	Acid or Alk, selectable on the back panel
Contact Open = Ac	id dosage $=$ Relay ON if Measure $>$ Setpoint
Contact Close = Alk dosage = Relay ON if Measure < Setpoint	
Setpoint	Adjustable, from 0 to 14 pH
Overtime	Adjustable, typically from 5 to approx. 30 minutes
Recorder Output	4 to 20 mA, accuracy \pm 0.20 mA,
	500 Ω maximum load
Power Consumpti	on 10 VA
Installation Categ	ory II
Power supply:	External (fuse protected)
BL931700-0	12 Vdc
BL931700-1	115/230 Vac ; 50/60 Hz
Dimensions	83 x 53 x 99 mm (3.3 x 2.1 x 3.9")

ASSEMBLING VIEW

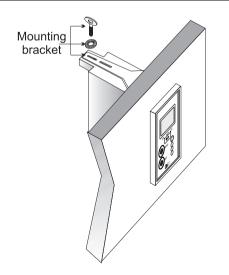

ACCESSORIES

pH CALIBRATION SOLUTIONS

HI 7004M/L pH 4.01 buffer solution, 230/500 mL bottle HI 7006M/L pH 6.86 buffer solution, 230/500 mL bottle HI 7007M/L pH 7.01 buffer solution, 230/500 mL bottle HI 7009M/L pH 9.18 buffer solution, 230/500 mL bottle HI 7010M/L pH 10.01 buffer solution, 230/500 mL bottle

OTHER SOLUTIONS

HI 70300M/L Electrode storage solution, 230/500 mL bottle HI 7061M/L Electrode general cleaning solution, 230/500 mL HI 7073M/L Protein cleaning solution, 230/500 mL bottle HI 7074M/L Inorganic cleaning solution, 230/500 mL bottle HI 7077M/L Oil & Fat cleaning solution, 230/500 mL

REFILLING ELECTROLYTE SOLUTIONS (50 mL, 4 pcs.)

3.5M KCl + AqCl. for single junction electrodes HI 7071 HI 7072 1M KNO_a solution

3.5M KCl, for double junction electrodes HI 7082

pH ELECTRODES

HI 1002/5 BNC connector, double junction, plastic-body w/external thread & 5 m (16.5') cable

Screw connector, double junction, glass-body HI 1090T with external thread

Screw connector, single junction, glass-body HI 1110S Screw connector, double junction, plastic-body HI 1210T

with external thread

HI 2114P/2 BNC connector, double junction, plastic-body with 2 m (6.6') cable

HI 1210B/5 BNC connector, double junction, plastic-body. with 5 m (16.5') cable

HI 2910B/5 BNC connector, double junction, plastic-body. with built-in amplifier and 5 m (16.5') cable

EXTENSION CABLES, SCREW TO BNC CONNECTOR

HI 7855/5 Extension cable 5 m (16.5') long HI 7855/10 Extension cable 10 m (33') long

OTHER ACCESSORIES

BL PUMPS Dosing Pumps (flow rate from 1.5 to 20 LPH) HI 6050 Submersible electrode holder, 60 cm (24") HI 6051 Submersible electrode holder, 110 cm (43") HI 6054B Electrode holder for in-line applications

HI 6054T Electrode holder for in-line applications HI 710005/6 12 Vdc power adapter, US/European plug

HI 731326 Calibration screwdriver (20 pcs.)


Mounting brackets HI 740146

HI 7871 Level Controller (min and max)

HI 7873 Level Controller (min. max and overflow)

FUNCTIONAL DESCRIPTION


Front panel

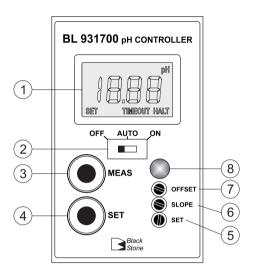

- 1. Liquid Crystal Display
- 2. Switch for selecting dosing mode:
 - OFF = dosing disabled
 - Auto = automatic dosage, depending on setpoint value and dosing selection
 - **ON** = dosing always active
- 3. $\,$ MEAS key to set the instrument to measurement mode
- 4. **SET** key to display and set the setpoint value
- 5. **SET** trimmer to adjust the setpoint value (0 to 14 pH)
- SLOPE trimmer to adjust the pH slope value during calibration
- 7. **OFFSET** trimmer to adjust the pH offset value during calibration
- 8 3-colour LED indicator
 - Green = meter in measurement mode
 - Orange/Yellow = dosing in progress
 - Red, blinking = indicates an alarm condition

Hanna Instruments reserves the right to modify the design, construction or appearance of its products without advance notice.

Rear panel

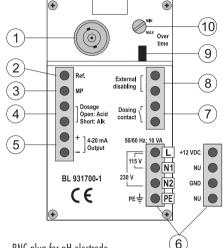

- 1. BNC plug for pH electrode
- 2. Connection for electrode reference
- 3. Connection for potential Matching Pin
- 4. Acid/Alkaline dosage selection terminal:
 - ullet contact open = acid selection
 - contact closed = alkaline selection
- 5. 4-20 mA output terminal for recorder connection
- 6. Power supply terminal:
 - for **BL931700-0** model: 12 Vdc adapter
 - for **BL931700-1** model: 115 Vac or 230 Vac option
- 7. This contact acts as a switch for driving the dosing system (e.g. dosing pump)
- $8. \quad \hbox{External control and disabling of dosing system} \\$
- Jumper for enabling (jumper in) or disabling (jumper removed) the overtime control
- 10. Trimmer for overtime setting (typically from 5 to 30 minutes)



All external cables connected to the rear panel should end with cable lugs.



A circuit breaker (rated 6A max.) must be connected in close proximity to the equipment, and in a position easy to reach by the operator, for disconnection of the instrument and of all the devices connected to the relays.

OPERATIONS

REAR PANEL CONNECTIONS

Terminals #1, #2 and #3: Electrode

- Connect a pH-electrode to the meter's BNC plug (#1).
- To benefit from the differential input, connect the proper electrode wire (if available) or a cable with a potential matching pin (grounding bar) to the relevant terminal (#3) on the rear panel.

Note: When the Matching Pin can not be immersed together with the pH electrode in the solution, disable the differential input by shorting terminals #3 (Matching Pin) and #2 (Electrode Reference) with a jumper wire.

Terminals #4: Dosing selection

- For acid dosage, leave the circuit open.
- \bullet For alkaline dosage, short the terminals with a jumper wire.

Terminals #5: 4-20 mA Output

These output terminals are used for connecting a recorder.
The output is from 4 to 20 mA and is proportional to the measured pH value.

Terminals #6: Power Supply

- • Model BL931700-0: connect the 2 wires of a 12 Vdc power adapter to the terminals +12 Vdc and GND.
- Model BL931700-1: connect a 3-wire power cable to the terminals while paying attention to the correct earth (PE), line (L) and neutral (N1 for 115 V or N2 for 230 V) contacts.

Terminals #7: Dosing Contact

- This contact drives the dosing system according to the selected setpoint and dosing direction:
 - if "Acid" dosage is set, the relay is ON and dosing activated if measured value is higher than setpoint;
 - if "Alk" dosage is set, the relay is ON and dosing activated if measured value is lower than setpoint.

Note: The setpoint has a typical hysteresis value comparable to the meter's accuracy.

Terminals #8: External Disabling Contact

- This is a normally open contact and can be used for example for connecting a level controller.
- When the contact is closed, any dosing action stops, the LED indicator on the front panel will blink Red and the LCD will show the "HALT" warning message.

Note: If the OFF/Auto/ON switch is in ON position, the dosing action will not stop, even if the external disabling contact is closed. Dosage will proceed, the

LED indicator will light up Orange/Yellow and the LCD will show the "HALT" warning message.

Overtime system: jumper (#9) and trimmer (#10)

- This system allows the user to set a maximum dosing period, by adjusting the rear trimmer from 5 (min) to approx. 30 (max) minutes.
- When the set time is exceeded, any dosing action stops, the LED indicator on the front panel will blink Red and the LCD will show the "TIMEOUT" warning message. To exit the overtime condition, set the OFF/Auto/ON switch to OFF position, and then to Auto again.
- For disabling the overtime feature, simply remove the jumper from the rear panel.

Note: The overtime system works only if the **OFF/Auto/ON** switch is in **Auto** position.

OPERATING THE METER

Before proceeding make sure that:

- the meter is calibrated:
- the setpoint value has been properly adjusted;
- all rear panel wiring and selections are correct:
- the OFF/Auto/ON switch is in the desired position.

Install or immerse the electrode in the solution to be monitored, then press the **MEAS** key (if necessary).

The LCD will show the pH value. The LED indicator will light up Green when the meter is in measurement mode and dosing is not active, while it will light up Orange/Yellow for signaling that a dosing action is in progress.

CALIBRATION

With meter in measurement mode, immerse electrode and Matching Pin (if available) in pH 7.01 buffer solution, shake briefly and wait for reading to stabilize. Adjust the **OFFSET** trimmer until "7.01 pH" is displayed on the LCD.

Rinse electrode and Matching Pin (if available), immerse them in pH 4.01 (or pH 10.01) buffer solution, shake briefly and wait for reading to stabilize. Adjust the SLOPE trimmer until "4.01 pH" (or "10.01 pH") is displayed on the LCD.

SETPOINT

Press the **SET** key: the display will show the default or previously adjusted value, together with the "**SET**" indication. Using a small screwdriver adjust the **SET** trimmer until the desired setpoint value is displayed.

After 1 minute the meter automatically returns to the normal mode; if not, press the **MEAS** key.

ISTBL1700 04/13